




## LDM350/3 Series DRIVER

Replaces LDM350HO series driver

- Compact Size
- Current Regulating
- 24VDC
- DIN Rail Mount
- PNP/NPN Strobe or Continuous Mode

### ELECTRICAL:

Input Voltage: 24VDC -0.5 / +4V  
Input Current: 500m Amp  
Connection: Screw terminals

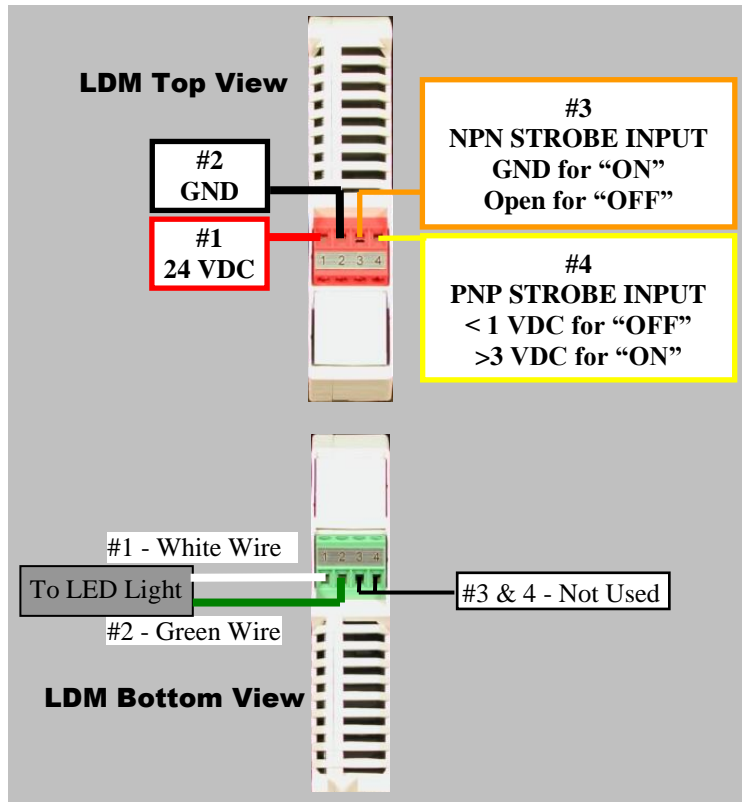

### LDM350/3 is compatible with the following lights:

LL16 – All Colors except -850 (IR)  
SP3.25 – All Colors except -850 (IR)

### NOTE:

Jumper 24VDC to PNP Strobe Input or  
GND to NPN Strobe input for light to  
remain in constant "ON" state.

Strobe is Pulse Width Duration – Light will  
remain "on" for duration of signal or pulse.

**Note: Brown, Black and Blue wires are  
not used on LDM350/3 Driver**

## Warning!!!

**USE ONLY SPECTRUM ILLUMINATION LDM DRIVER WITH MONSTER LIGHTS.  
DO NOT CONNECT MONSTER LIGHTS DIRECTLY TO 24VDC!**