




LDM4900 Series DRIVER

- Compact Size
- Current Regulating
- 24VDC
- DIN Rail Mount
- PNP/NPN Strobe or Continuous Mode

ELECTRICAL:

Input Voltage: 24 VDC -0.5 / +4V
Input Current: 6 Amp max
Connection: Screw terminals

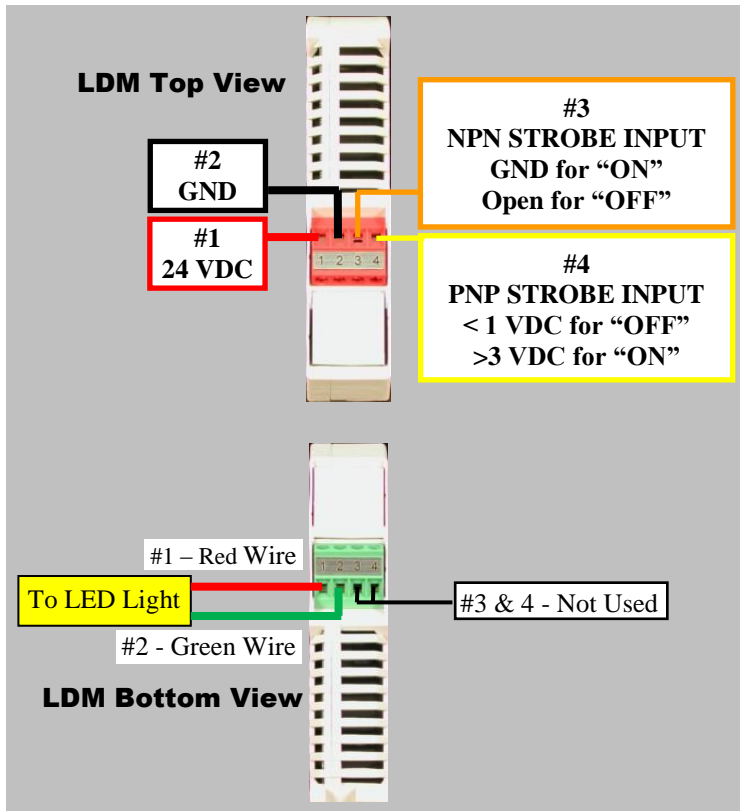

LDM4900 is compatible with the following lights:

LL180.5 – All Colors

NOTE:

Jumper 24VDC to PNP Strobe Input or GND to NPN Strobe input for light to remain in constant "ON" state.

Strobe is Pulse Width Duration – Light will remain "on" for duration of signal or pulse.

Note: White, Blue, Orange and Black wires are not used on LDM4900 Driver

Warning!!!

**USE ONLY SPECTRUM ILLUMINATION LDM DRIVER WITH MONSTER LIGHTS.
DO NOT CONNECT MONSTER LIGHTS DIRECTLY TO 24VDC!**