



VLDM1750 Series DRIVER

- Variable Intensity Control - ~10% to 100%
- Compact Size
- Current Regulating
- 24VDC
- DIN Rail Mount
- PNP/NPN Strobe or Continuous Mode

ELECTRICAL:

Input Voltage: 24 VDC -0.5 / +4V
Input Current: 2 Amp
Connection: Screw terminals



VLDM1750 is compatible with the following lights:


LL128.75 – All Colors

NOTE:

Jumper 24VDC to PNP Strobe Input or
GND to NPN Strobe input for light to
remain in constant "ON" state.

Strobe is Pulse Width Duration – Light will
remain "on" for duration of signal or pulse.

**Note: Blue, Black and White wires are
not used on VLDM1750 Driver**

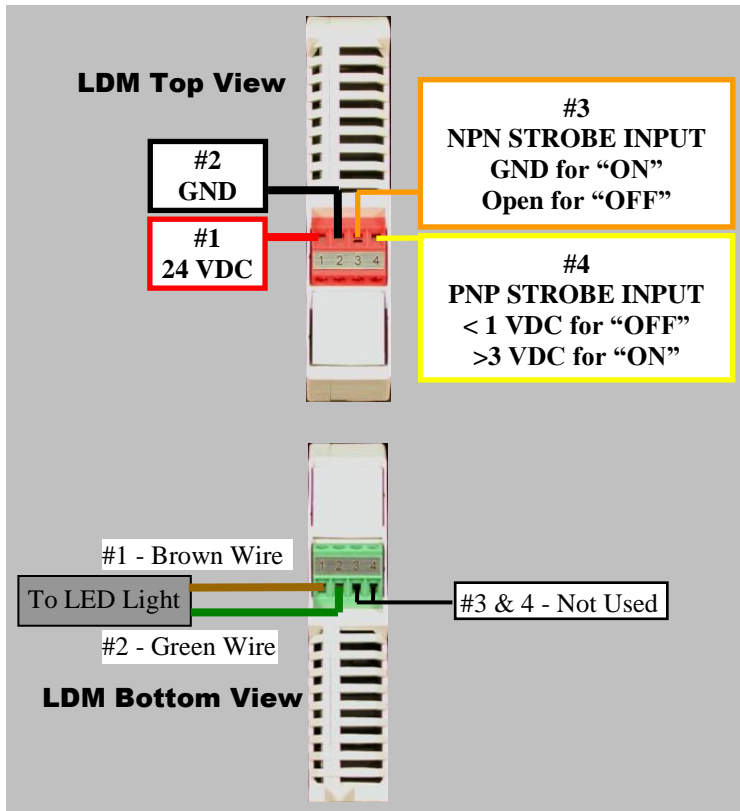

Warning!!!

**USE ONLY SPECTRUM ILLUMINATION LDM DRIVER WITH MONSTER LIGHTS.
DO NOT CONNECT MONSTER LIGHTS DIRECTLY TO 24VDC!**