





VLDM700 Series DRIVER

Replaces VLDM series driver

- Variable Intensity Control - ~10% to 100%
- Compact Size
- Current Regulating
- 24VDC
- DIN Rail Mount
- PNP/NPN Strobe or Continuous Mode

ELECTRICAL:

Input Voltage: 24 VDC -0.5 / +4V
 Input Current: 1 Amp
 Connection: Screw terminals

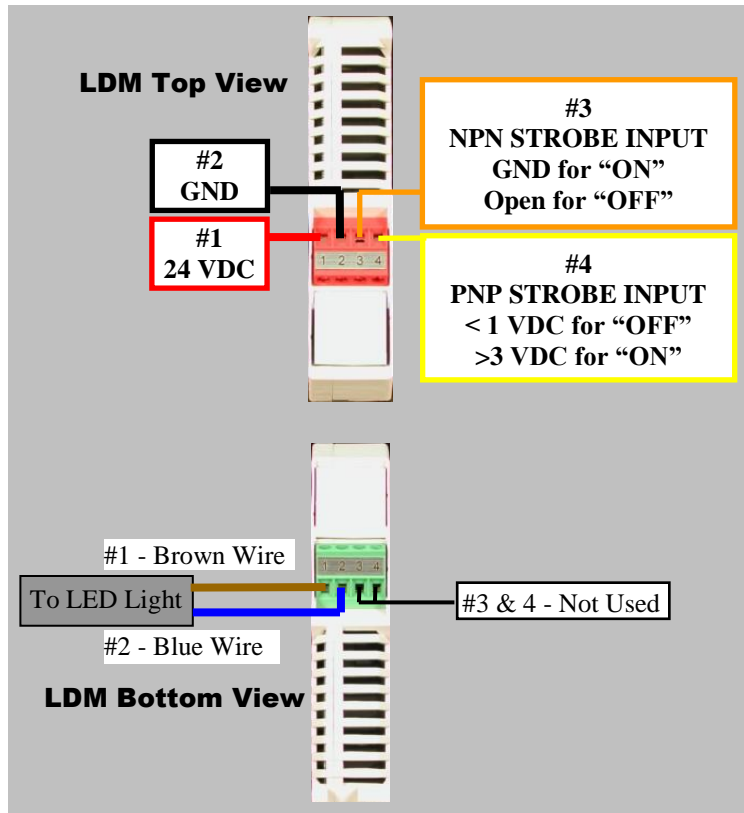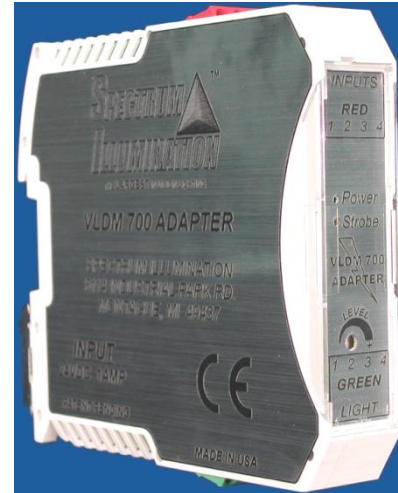

VLDM700 is compatible with the following lights:

- LL111.5, LL26 – All Colors
- RL3.5, RL5.5, RL8.5 – All Colors
- DL7.25 – All Colors
- MLL22 – All Colors

NOTE:

Jumper 24VDC to PNP Strobe Input or
 GND to NPN Strobe input for light to
 remain in constant “ON” state.

Strobe is Pulse Width Duration – Light will
 remain “on” for duration of signal or pulse.

**Note: White, Black and Green wires are
 not used on VLDM700 Driver**

Warning!!!

**USE ONLY SPECTRUM ILLUMINATION LDM DRIVER WITH MONSTER LIGHTS.
 DO NOT CONNECT MONSTER LIGHTS DIRECTLY TO 24VDC!**