

# Lightline Lenses



Cylindrical and apertured lenses, A08806 & A08826

## Cylindrical and apertured lenses for 1" to 16" lightlines

- Cylindrical and apertured lenses are available as standard products for most lightline models. They can be custom made for all models.
- Cylindrical lens attachments are designed to collect light exiting the lightline to increase intensity up to a factor of 10.
- Apertured lens attachments are designed to project a more collimated line of light, not to increase light intensity.
- The lenses are adjustable and easily attach to SCHOTT lightlines.
- Custom length and configurations are available. Lead time is required.




3" (76 mm) Lightline with A08582 Cylindrical Lens

Lightline Lenses

### DCR® III Light Source


Dimensions in ( ) are in mm

A08571  
Cylindrical and Apertured Lenses

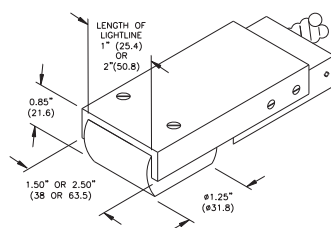

A08824, A08826, A08832  
Cylindrical Lenses

A08806  
Apertured Lenses

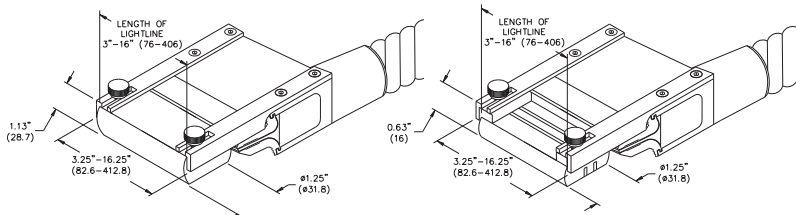

### Lenses and Polarizer Kits

Lightline Part No.	Lens Part No.	
	Cylindrical	Apertured
<b>1", 2", &amp; 3" Lightlines</b>		
A08579	★ A08571	Custom
A08580	★ A08582	Custom
A08583	★ A08572	Custom
A08584	A08572	Custom
A08588	A08571	Custom
A08589	A08572	Custom
<b>3" to 16" Continuous Lightlines</b>		
A08903	A08823	Custom
A08904	A08824	Custom
A08905	A08825	Custom
A08906	A08826	Custom
A08907	A08827	Custom
A08908	A08828	Custom
A08909	A08829	Custom
A08910	A08830	Custom
A08911	A08831	Custom
A08912	A08832	Custom
A08913	A08833	Custom
A08914	A08834	Custom
A08915	A08835	Custom
A08916	A08836	Custom
A08975	A08826	A08806
<b>24" to 40" Continuous Lightlines</b>		
A08940	A08860	Custom
A08964	A08864	Custom
<b>45 Degree Lightline</b>		
Custom	Custom	Custom

★ Made-to-order products.