

# Inline Controller


For applications not requiring the features of the PAD2 and PAD1 controllers, the 24 V DC option is available. An inline controller housed in a small aluminium tube as part of the light head cable enables the light head to be directly connected to the 24 V DC power supply.

This option is available for all light heads.




## Mechanical Dimensions

1 A light heads

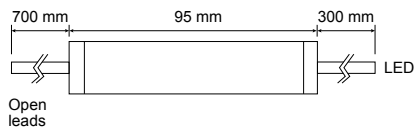

3 A light heads

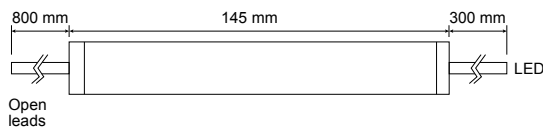

## General Specifications

	1 A light head	3 A light head
Supply voltage	24 V DC, 1 A	24 V DC, 2 A
Light head drive current	max. 1 A	max. 3 A
Light intensity 100%, not adjustable	INL24V	INL3FO
Light intensity 100%, adjustable	INL24VT	INL3TO

## Cable Connections (Robot Cable Option)

Red & orange (white & yellow)	+ 24 V DC
Black & brown (green & brown)	0 V

## Order Information

Order number extension to light head

1 A light head	3 A light head
/INL24V	/INL3FO
/INL24VT	/INL3TO

## Options

- Cable length type (i.e. robot cable) on request