



LDM1050 Series DRIVER

- Compact Size
- Current Regulating
- 24VDC
- DIN Rail Mount
- PNP/NPN Strobe or Continuous Mode

ELECTRICAL:

Input Voltage: 24VDC -0.5 / +4V
 Input Current: 1.5 Amp
 Connection: Screw terminals



LDM is compatible with the following lights:


SP5.5 – All Colors
 WLL117.25 – All Colors

NOTE:

Jumper 24VDC to STROBE PNP Input or
 GND to STROBE NPN for light to remain
 in constant “ON” state.

Strobe is Pulse Width Duration – Light will
 remain “on” for duration of signal or pulse.

**Note: White, Brown and Green wires
 are not used on LDM1050 Driver**

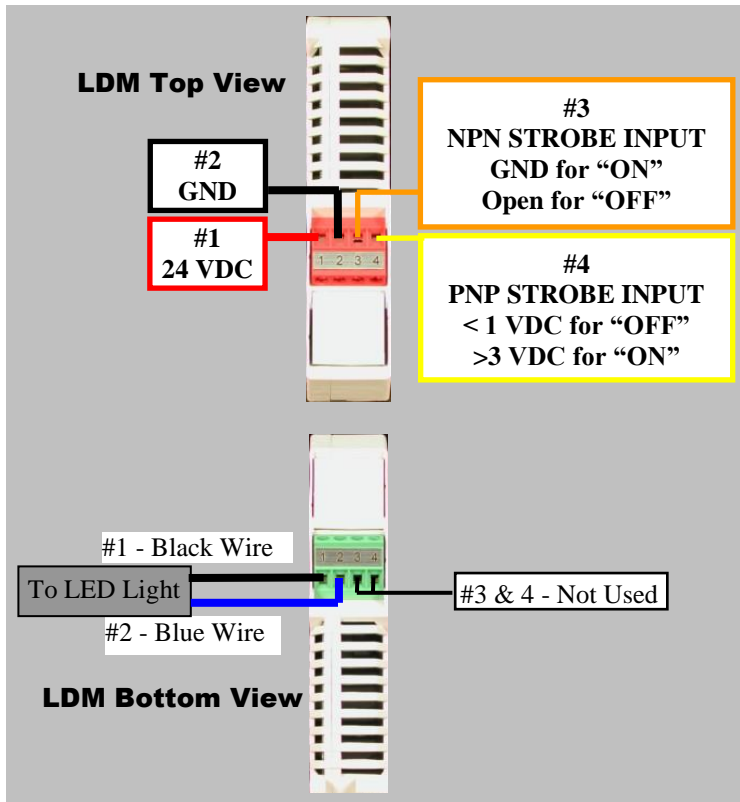

Warning!!!

**USE ONLY SPECTRUM ILLUMINATION LDM DRIVER WITH MONSTER LIGHTS.
 DO NOT CONNECT MONSTER LIGHTS DIRECTLY TO 24VDC!**