

# HYPERION Optical Sensing Instrument | si255



## Description

The si255 is an industrial grade fan-less optical sensing interrogator. Featuring both static and dynamic full spectrum analysis, the si255 provides long-term, reliable and accurate measurements of nearly 1000 sensors on 16 parallel, 160 nm wide channels.


The si255 features an all new, high power, low noise, ultra wide swept wavelength laser with guaranteed absolute accuracy on every scan which is realized with Micron Optics patented Fiber Fabry-Perot filter and wavelength reference technology.

The HYPERION platform, on which the si255 is based, features groundbreaking capabilities including high-performance DSP and real-time FPGA processing on-board. This enables rapid, full-spectrum data acquisition and flexible peak detect algorithms of Fiber Bragg Gratings (FBG), Long Period Gratings, Fabry-Perot (FP) and Mach-Zehnder (MZ) sensors with low-latency access to data for closed loop feedback applications.

**Dynamic and absolute measurements of FBG & FP sensors on 16 parallel, 160 nm wide channels and ENLIGHT compatible.**

The HYPERION platform is now compatible with ENLIGHT, Sensing Analysis Software, which provides a single suite of tools for data acquisition, computation, and analysis of optical sensor networks, see <http://www.micronoptics.com/products/sensing-solutions/software/> for more information.

The HYPERION platform also includes a comprehensive Application Programming Interface (API) and examples written in LabVIEW, Python, Matlab, C++ and C#.

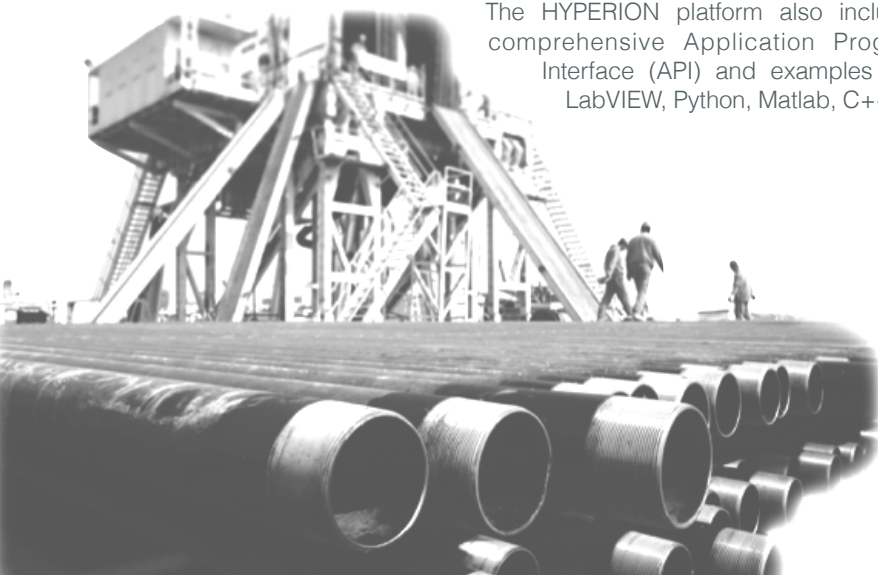

## Key Features

**Standard, High Speed and Enhanced Visibility** models, each with an available depolarized source and up to 16 parallel channels

**Dynamic and absolute measurements of FBGs, LPGs, FP and MZ sensors** from detailed optical spectrum

**Deep, continuous dynamic range is** available to each sensor on each channel, independent of differential system losses

**Data verification key guarantees only valid output.** Each data set is calibrated and verified against a permanent NIST traceable reference.

**Proven reliability and longevity of the Micron Optics swept wavelength source,** with over 100 million hours logged since 2000



## Deployments

**Oil & gas** (well reservoir management, platform structural health, pipeline condition)

**Medical devices** (probes, catheters)

**Industrial measurements** (industrial heaters and metal fabrication process control)

**Energy** (wind turbines, oil wells, pipelines, nuclear reactors, generators)

**Structures** (bridges, dams, tunnels, mines, buildings)

**Security** (perimeter intrusion, heat detection, security gate monitoring)

**Aerospace** (airframes, composite structures, wind tunnels, static tests)

# HYPERION Optical Sensing Instrument | si255



## Performance Properties

Measurement option	Enhanced visibility, 10 Hz	Standard, 100 or 1000 Hz	High speed, 5000 Hz
Number of channels	4, 8 or 16 parallel channels	4, 8 or 16 parallel channels	4, 8 or 16 parallel channels
Wavelength range	1500-1600 or 1460-1620 nm	1500-1600 or 1460-1620 nm	1500-1580 or 1510-1590 nm
Wavelength accuracy / stability <sup>1</sup>	1 pm / 1pm	1 pm / 1pm	2 pm / 3 pm
Wavelength repeatability <sup>2</sup>	1 pm, 0.3 pm at 1 Hz	1 pm, 0.05 pm at 1 Hz	2 pm, 0.05 pm at 1 Hz
Dynamic range / continuous <sup>3</sup>	35 dB peak / 45 dB FS	25 dB peak / 40 dB FS	17 dB peak / 40 dB FS
Full spectrum measurement <sup>4</sup>	Included, data rate at 10 Hz	Included, data rate at 10 Hz	Included, data rate at 10 Hz
Optical connectors	LC/APC		
Compatible sensors <sup>5</sup>	Fiber Bragg Gratings, Long Period Gratings, Fabry-Perot and Mach-Zehnder Interferometers		
Depolarizer Option Available <sup>6</sup>	Yes		

## Interfaces and Software

Interface	Ethernet
Software	Comprehensive API and example support for LabVIEW™, Python, Matlab, C++ and C#

## Physical Properties

Dimensions / weight	307 mm x 274 mm x 69 mm / 4.9 kg
Operating / storage conditions	-20 to 60 C, < 80%RH non-condensing / -30 to 70 C, < 95%RH non-condensing
Input voltage	9 - 36 VDC, AC/DC converter included (100~240 VAC, 47~63 Hz)
Power consumption at 12 V	30 W typ, 40 max

## Example Configurations

	Descriptions
<b>si255-ST-04-1500-1600-0100-NO</b>	4 ch si255 ST with 1500-1600 nm scan range, 100 Hz scan rate and no internal accessories
<b>si255-EV-08-1460-1620-0010-DP</b>	8 ch si255 EV with 1460-1620 nm scan range, 10Hz scan rate and internal depolarizer option
<b>si255-ST-16-1460-1620-1000-FR</b>	16 ch si255 ST with 1460-1620 nm scan range, 1 kHz scan rate and full redundancy option

## Accessories

<b>x55_rkm</b>	19" rack mount kit
<b>x55_skm</b>	Surface mount kit
<b>x55_cas</b>	x55 transport case
<b>x55_atx</b>	ATEX certified
<b>x55_ew3</b>	3 year extended warranty
<b>oa2001</b>	LC/APC-FC/APC connectivity kit

## Notes

- Accuracy per NIST Technical Note 1297, 1994 Edition, Section D. 1.1.1, definition of "accuracy of measurement." Stability captures effects of long term use over operating temperature range.
- Per NIST Technical Note 1297, 1994 Edition, Sect D.1.1.2, definition of "repeatability [of results of measurements]."
- Loss and/or sensor shape may affect repeatability and accuracy for each option as described in Micron Optics TN 1115.
- For faster scan rates >10 Hz, data bandwidth may limit rate of multichannel spectral streams.
- FBG bandwidths of 0.25 nm used for performance qualification.
- For details regarding the Depolarized laser option, see [http://www.micronoptics.com/wp-content/uploads/2016/11/TN1108\\_x55\\_Depolarized\\_Laser\\_Option.pdf](http://www.micronoptics.com/wp-content/uploads/2016/11/TN1108_x55_Depolarized_Laser_Option.pdf)
- Complies with the WEEE Directive 2012/19/EU for the following European countries: UK, IT, DE, FR, NL, BE, ES, CH.

## Ordering Information

### si255-mm-cc-lwvl-uwvl-ssss-aa

<b>mm</b>	Measurement option
EV	Enhanced visibility
ST	Standard
HS	High speed
<b>cc</b>	Number of channels
04	4 channel
08	8 channels
16	16 channels
<b>lwvl</b>	Lower wavelength in nanometers
<b>uwvl</b>	Upper wavelength in nanometers
<b>ssss</b>	Scan rate in Hz
<b>aa</b>	Internal Accessory Option
NO	None
DP	Depolarizer
FR	Full Redundancy (16 ch only)



**POLYTEC GmbH**  
Tel: +49 (72 43) 604 174 0

**Polytec-Platz 1 - 7**  
Fax: +49 (72 43) 6 99 44

**D -76337 Waldbronn**  
E-Mail: [ot@polytec.de](mailto:ot@polytec.de)

**GERMANY**  
[www.polytec.de](http://www.polytec.de)

